


UNIBOX M “PRAKTIK”

User's manual

Universal case UNIBOX M is made for storage, transportation and use PRAKTIK 6M, 6S echo sounders during fishing.

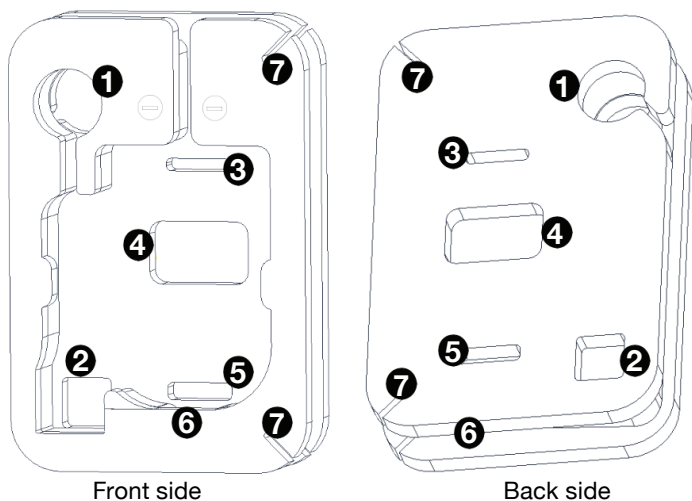

1. A hole for a battery compartment with a sensor (here in after - Sensor)
2. A hole for removing the sensor from the Unibox
3. A hole for fixing the echo sounder when the Unibox is positioned vertically (on the neck)
4. A hole for fixing the echo sounder when the Unibox is positioned horizontally
5. Auxiliary hole for echo sounder's block fixing
6. Lateral auxiliary hole for echo sounder's block fixing
7. A hole for fixing the cable of the desired length

SOUNDER STORAGE AND TRANSPORTATION

It is recommended to store and transport the echo sounder in the Unibox with the screen facing down.

The order of packing the echo sounder in the Unibox:

1. Place the echo sounder unit with the cable gland facing up.
2. Wind the cable clockwise around the Unibox coil, preferably without overlapping.
3. Insert the sensor from below into the hole (1) and place the sensor in the Unibox next to the block.


Removing the echo sounder from Unibox is performed in reverse order.



FIXING THE ECHO SOUNDER'S BLOCK IN THE UNIBOX WITH A CORD

With the cord the echo sounder's block can be securely fixed in the Unibox and can be conveniently placed next to the hole in winter or on a boat bench in summer, as well as used vertically when catching a predator, so that the screen is in the viewing area, and your hands are free.

1. Pull the lace through hole (6), then into (5) and pull out through (3).
2. Pull the string through the special hole on the block, pass the block through the loop and fix the string on the block.

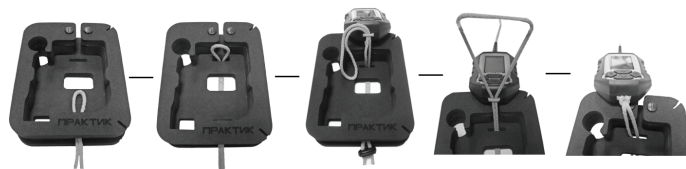

Having fixed the echo sounder unit in the Unibox with the cord, you can position the echo sounder so that the information screen is directly in the clear visibility zone:

- Horizontal arrangement (near the hole, on the boat bench)
- Vertical arrangement (when catching a predator)



Place the string around your neck and adjust the length of the string so that the unit screen is clearly visible in the viewing area.

The echo sounder in the Unibox can be easily hung in a tent, on an ice screw and others. There are many operating options.

If the block is fixed in the Unibox, the echo sounder is protected from falling out and further possible drowning. If the thickness of the ice is small, then you can wind the extra cable on the Unibox coil and fix it at the desired length using special holes (7).